


PARATREAD APPLICATION

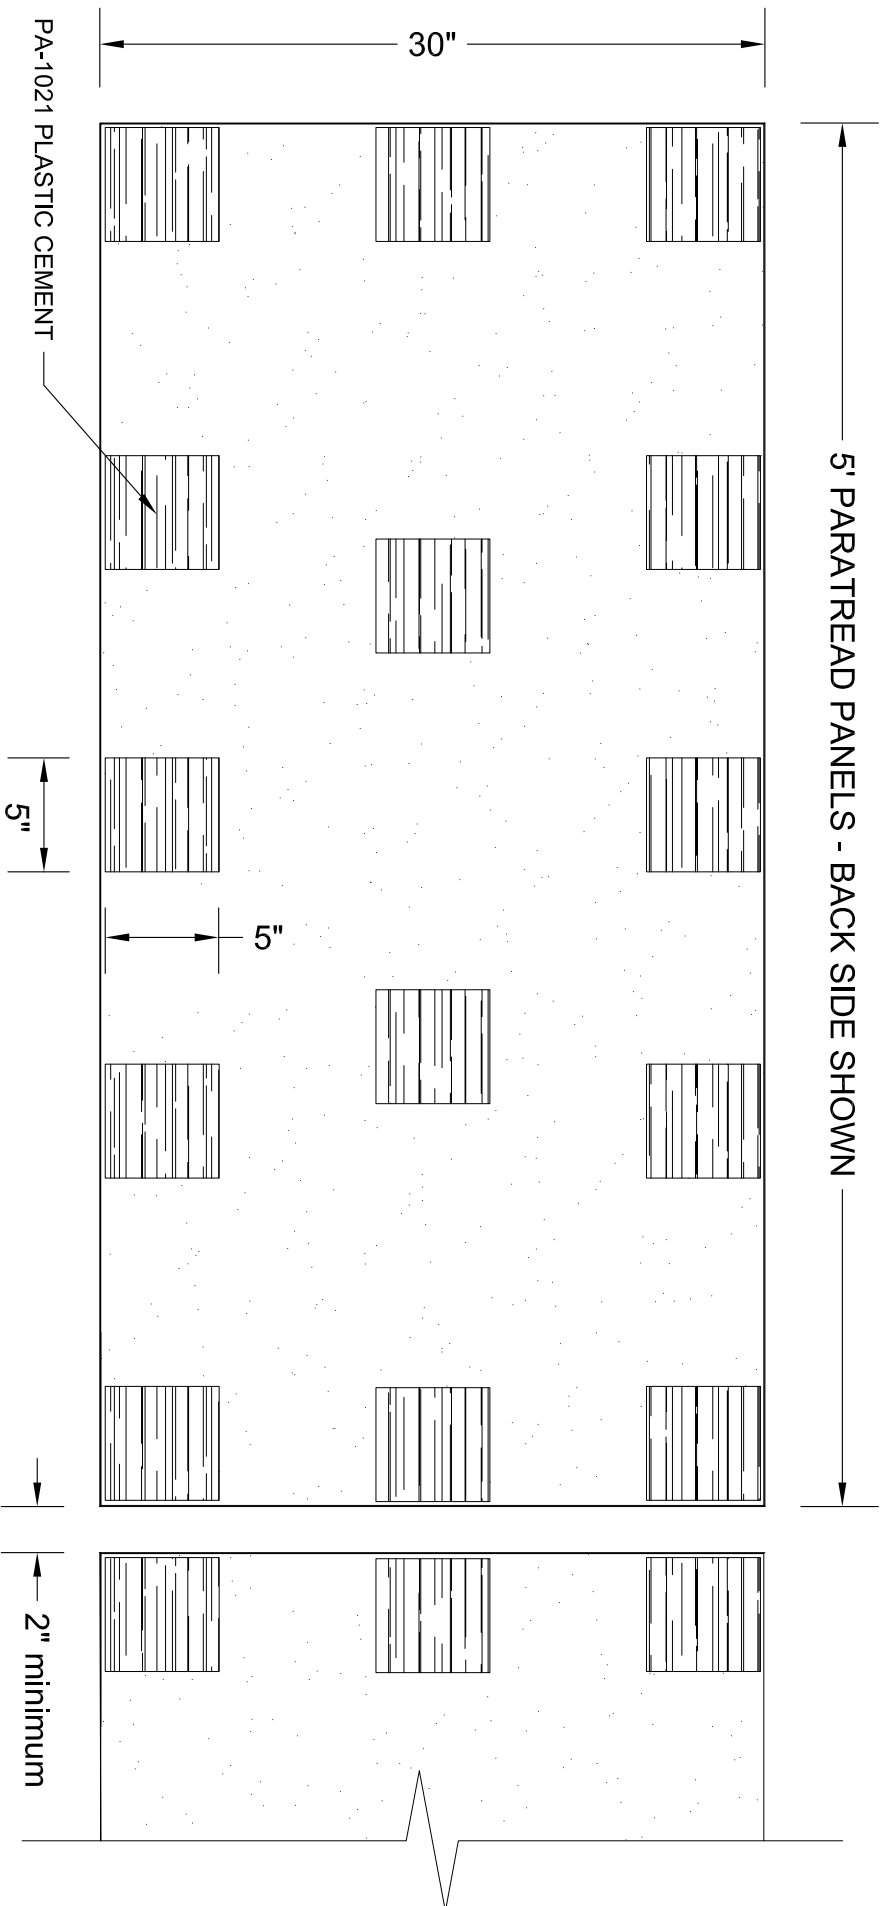

- NOTES: 1. PARATREAD IS APPLIED WITH PA-1021 PLASTIC CEMENT TO BOTH GRANULE SURFACED AND FOIL FINISHED MEMBRANES. THE PANELS MUST BE PRE-CUT FROM THE ROLL IN MAXIMUM 5 FOOT LENGTHS AND ALLOWED TO RELAX PRIOR TO APPLICATION. COLD WEATHER APPLICATION MAY REQUIRE PRE-WARMING PANELS TO ALLOW THE MATERIAL TO LAY FLAT. THE PA-1021 PLASTIC CEMENT IS APPLIED TO THE BACK SIDE OF THE PARATREAD IN APPROX. 5" SQUARES, SPACED APPROX. 11" O.C. AT THE OUTER EDGES AND 14" O.C. DOWN THE MIDDLE OF THE PANELS. THE PARATREAD PANEL IS SET OVER THE ROOF MEMBRANE SURFACE WITH THE GRANULE SURFACE SIDE UP. PRESSURE SHOULD BE EXERTED ON THE PANEL TO ENSURE POSITIVE CONTACT OF THE PLASTIC CEMENT TO THE ROOF SURFACE.
2. PARATREAD IS NOT APPROVED FOR USE ON SLOPES IN EXCESS OF 3" IN 12".
3. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN SIPLAST SPECIFICATIONS SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

N.T.S.



Siplast - 1000 East Rochelle Boulevard - Irving, Texas - 75062-3940
 (800) 922-8800 FAX: (469) 995-2206 www.siplast.com

Ref. #: paratread
 Date: 12.15.05